

Eyemax CD Copy

Camera Guard Security

(714)964-7697

1. Enter search mode
2. Select day of incident
3. Click Backup (below calendar)
4. Click "Next" to begin backup process
5. Select DFS (default); click check box for "External CD Burning Program"
6. click "Next"
7. Enter start time & end time (15-20 minutes max)
8. Click "Browse"
9. The "Browse For Folder" window will open
10. Click the + sign for Local Disk (C:)
11. Click the + sign for Documents and Settings
12. Click the + sign for Expedite Video
13. Click the yellow folder for "My Documents"
14. Click button labeled "New Folder" (lower right hand corner of the window)
15. Rename the folder and click on the yellow folder icon to the left of the name once or twice, until the name itself is highlighted
16. Click "Ok"
17. Screen returns to DVR Backup Wizard
18. Click "Next"
19. Put a check mark by each camera listed to include it in the CD Copy
20. Click "Next"
21. Click "Next" again to start backup process
22. * When the backup window closes, insert a blank CD. The blank CD will usually automatically run the Easy CD creator program. If it does not, follow the instructions at the bottom of the page
23. Move mouse to highlight "Make a Data CD"
24. Click on "Data CD Project"
25. Double-Click "Documents and Settings"
26. Double-Click "Expedite Video"
27. Double-Click "My Documents"
28. Click on folder created during step 14 to highlight it
29. Click on downward pointing "Add" arrow in the center area of the screen
30. Click on red circle labeled "Record"
31. Click button labeled "Start Recording" – this will start the CD creation process, which may take a few minutes
32. Click "Ok" when finished and close window
33. Click "No" on the "Save CD Project" window
34. Close all program windows to return to the main video screen

If the Easy CD Creator program does NOT open when you insert a blank CD, do

the following to access the program.

1. Click the "Control" button in the lower right-hand corner
2. Click "Network" in the upper right-hand corner
3. This should cause the "Start" bar to appear at the bottom of the screen; from here, select the program from the list of programs. If it does not appear there, click on "Start," then "Programs," then "Roxio Easy CD Creator 5," then "Project Selector".