

Eyemax CD Copy

Camera Guard Security

(714)964-7697

1. Enter a blank CD or DVD into the drive
2. Close any "Autorun" windows that appear
3. Click on "Search"
4. Click on "Backup"
5. Click on "Next"
6. Put a check mark on "Save in CD/DVD data of backup"
7. Click "Next"
8. Enter date of incident and set time (10-15 minutes max per CD, 1 hour max per DVD)
9. Click "Browse" to the right of "Select CD/DVD"
10. Wait until a pop up confirmation screen appears
11. Click "Ok" twice, bringing you back to the backup window
12. Under "Folder Name", type a name to identify the incident (e.g. Robbery, Slip and Fall, etc.)
13. Click "Next"
14. Select the cameras you wish to record to the CD/DVD
15. Click "Next"
16. Confirm the time and date of the incident are correctly indicated as the record segment
17. Click "Next"
18. The CD or DVD will automatically be burned. This process may take several minutes to complete, depending on how long a time segment was set to be saved. After the process completes, the screen will automatically close and the CD/DVD will be ejected from the drive.